FRONT SIDE MEMBER (CUT-P)

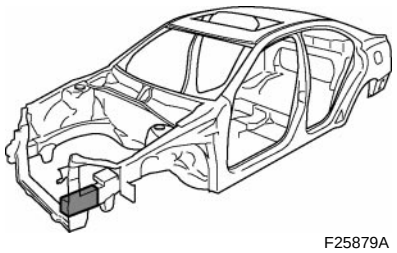

F25879A

With the radiator support removed.

Symbol meaning

: Remove Weld Points : Cut and Join Location

F25879B

REMOVAL

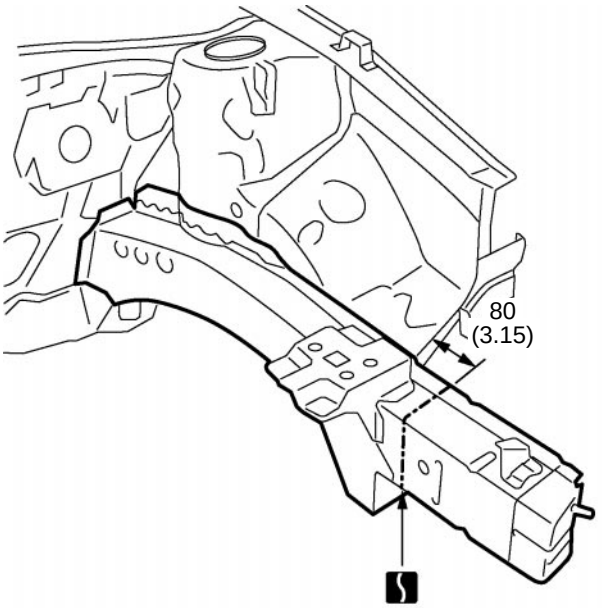

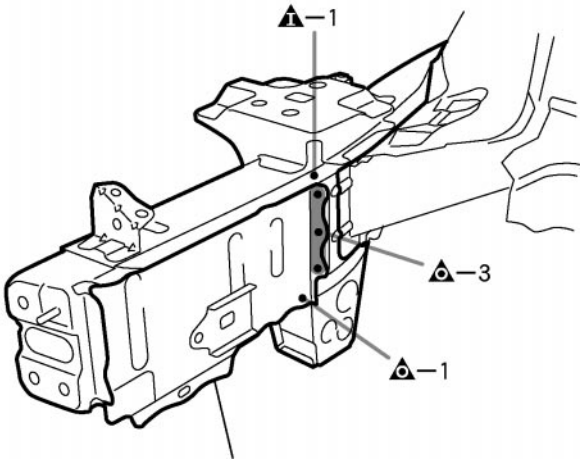

Front Side Member Extension

mm (in.)

F25879

[LH]

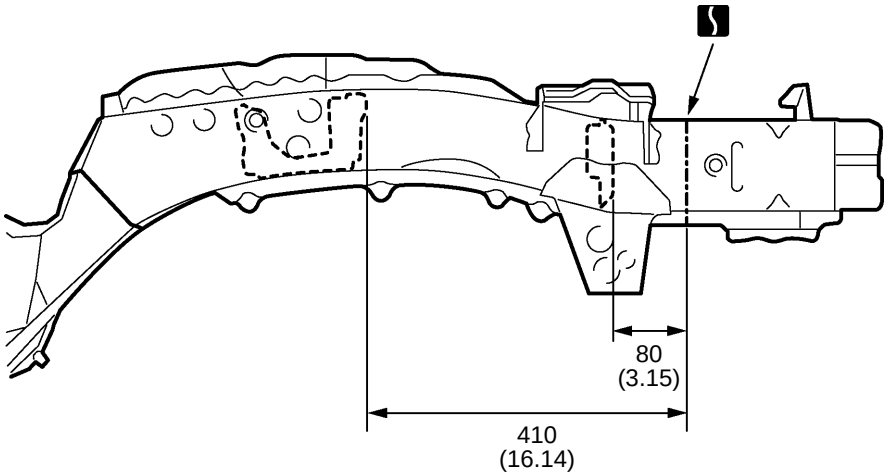

[RH]

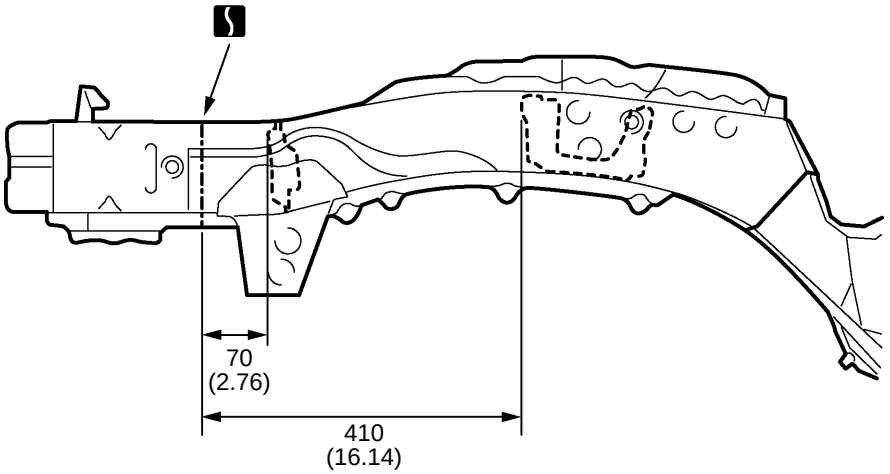

mm (in.)

F25880

REMOVAL POINT

1 These values are reference values.

Symbol meaning

: MIG Plug Weld : Butt Weld

F25881B

INSTALLATION

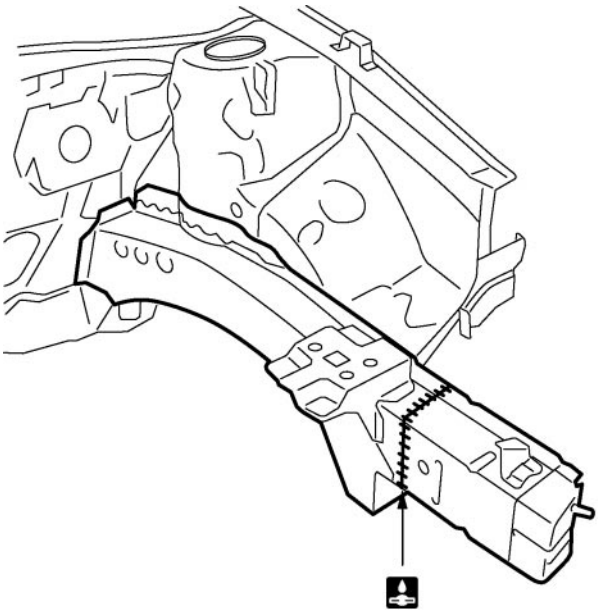

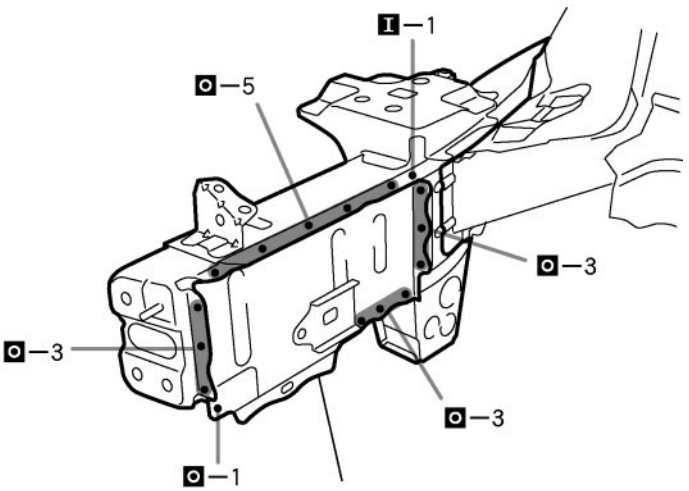

Front Side Member Extension

mm (in.)

F25881

INSTALLATION POINT

1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
2 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.